


How to calculate the center of your panel

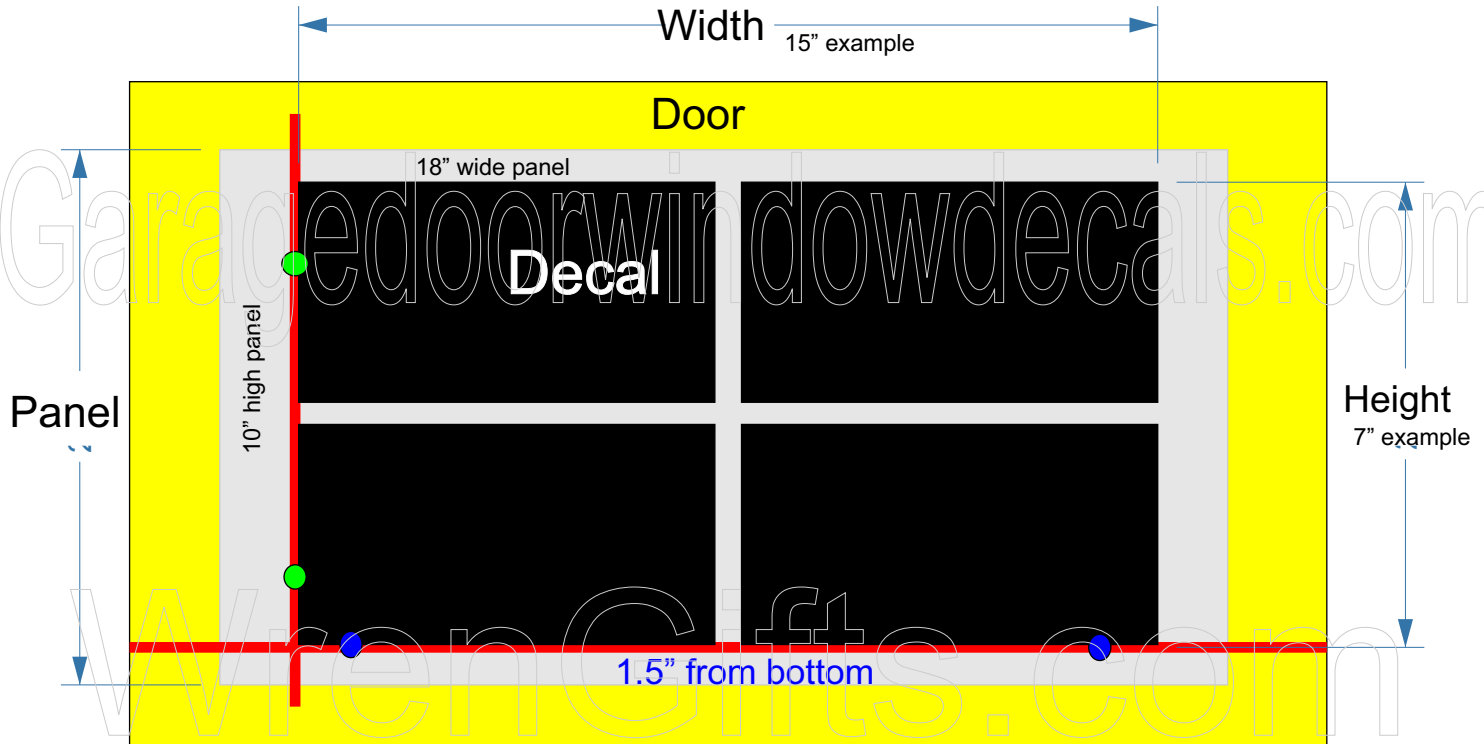

One very easy way to center the decal on your panel is to put masking tape at the bottom of your panels or draw a line with a pencil. Then align the decals to one of those marks. Here is how to get the measurements you need.

Bottom Line Measurement

Measure the height of your panel in this example we used 10", subtract that number from the height of decal in the example we used 7", divide that number by two.

This is the measurement for the bottom of your decal. $10" - 7" = 3" / 2 = 1.5"$ bottom line measurement. At the bottom of your panel make two dots that are 1.5" from the bottom in this example we used two blue dots. Using a ruler draw a line either using tape or a pencil between the two dots. This is your bottom alignment mark.

Left Side Line measurements

Measure the width of your panel in this example we used 18". Subtract that number from the width of the decal, in this example we used 15". $18" - 15" = 3" / 2 = 1.5"$ Make two marks in this example we made two green marks Using a ruler draw a line either using tape or a pencil between the two dots. This is your left side alignment mark.

Align the decal to the left and bottom marks attach the decal to your door with tape. Using the hinge method (supplement install instructions) install the decal to your door.